

# KODAK CHERISH F670/F680/F685

SMART HOME SECURITY CAMERA



## User Manual

The features described in this User Manual are subject to modifications without prior notice.

CHERISH\_EN\_F670/F680/F685\_V11

## WELCOME

Thank you for buying the **KODAK CHERISH F670/F680/F685** Smart Home Security Monitor.

With your mobile device, now you can monitor your home from your smart phone anywhere, anytime!

Please keep your original dated sales receipt. You will need to produce a copy of it to confirm your warranty status.

For product-related questions, please send an email to: **support@kodaksmarhome.com**.

 
This User Manual covers all the information you will need to get the most out of your product.

We advise to keep your Home Monitor plugged in at all times. Please read the Safety Instructions on page 18 carefully before installation.

## ASSEMBLY


### Check List:

F670/F680

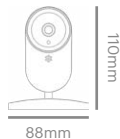

1 x Home Monitor  
(Camera)

 
F685



1 x Power adapter for  
Home Monitor

# HOME MONITOR OVERVIEW
 
## KODAK CHERISH F670/F680

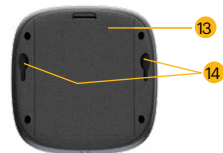


1. Camera Lens  
(resolution HD(1080p))
2. IR Sensor
3. Microphone
4. Pair Button
5. Micro-SD Card  
Cover (Only up to 32 GB  
- Class 10 memory card)

6. Lens Frame
7. LED Power Indicator
8. Power ON/OFF Switch

9. Speaker
10. Charging Socket
11. Ball Joint Arm
12. Thermometer and  
Humidity Sensor (For  
F680 model only)

13. Battery Door (F680 only)
14. Holes for wall mount


## KODAK CHERISH F685

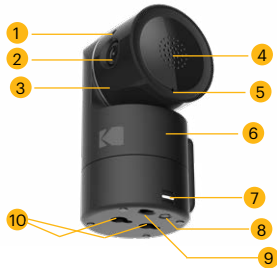 

1. IR Sensor
2. Camera Lens  
(resolution HD(1080p))
3. Lense Frame with  
Tilt function (up for  
90°, down for 15°)
4. Speaker
5. Microphone
6. Pan function (330°)
7. LED Power Indicator
8. Pair Button
9. Power ON/OFF Switch
10. Holes for Wall Mount



 
11. Micro-SD Card Cover  
(Only up to 32GB - Class 10  
memory card)
12. Thermometer and  
Humidity Sensor

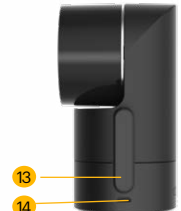


13. Antenna
14. Charging Socket

## INSTRUCTIONS OF HOW TO WALL MOUNT YOUR F670/F680 CAMERA

 
1. First, put the screws on the wall. The diameter of the screws should be at least 5mm and maximum of 9mm. The distance between two screws should be 69mm.



 2. Place and match the wider holes on the base of the camera with the screws.

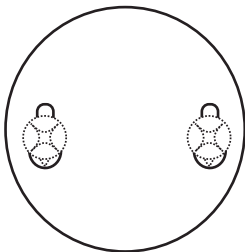


 3. Slide the base of the camera downwards so that the screws lock towards the narrow side.

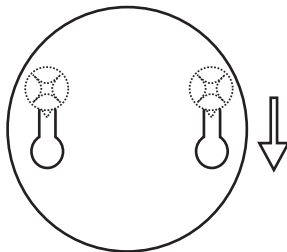


## INSTRUCTIONS OF HOW TO WALL MOUNT YOUR F685 CAMERA

 
1. First, put the screws on the wall. The diameter of the screws should be at least 5mm and maximum of 9mm. The distance between two screws should be 20mm.

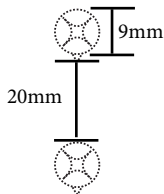

  2. Place and match the wider holes on the base of the camera with the screws.

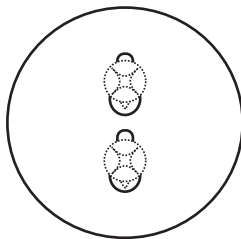



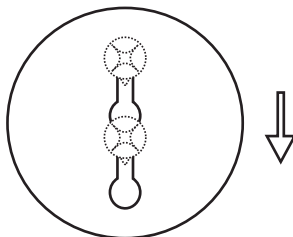




3. Slide the base of the camera downwards so that the screws lock towards the narrow side.










## LED Behaviors for Home Monitor(F670/F680)



	Camera is OFF, battery is charging: Solid Red
	Camera powering up: Solid Blue for first few seconds
	Camera locating router: Blue blinking every one second
	Camera connected to router: Solid Blue
	Camera in pair mode: Blinking Blue & Red
	Firmware upgrading. <b>DO NOT SWITCH OFF THE CAMERA:</b> Blinking Purple, Red & Blue
	Camera is OFF, battery is fully charged: No Light

 
## LED Behaviors for Home Monitor(F685)



	Camera is OFF, battery is charging: Solid Red
	Camera powering up: Solid Blue for first few seconds
	Camera locating router: Blue blinking every one second
	Camera connected to router: Solid Blue
	Camera in pair mode: Blinking Blue & Red
	Firmware upgrading. <b>DO NOT SWITCH OFF THE CAMERA:</b> Blinking Purple, Red & Blue
	Camera is OFF, battery is fully charged: No Light

## ESSENTIAL GUIDELINES FOR INSTALLING YOUR HOME MONITOR

- The signal strength may also be reduced by other solid structures, like walls or electrical equipment, such as radios, TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the Home Monitor at least 5 feet/1.5 meters from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Home Monitor to another position in the room near the router.
- For the **F685**, the Pan-and-Tilt function of the Home Monitor **is operated only via the App**. Do not attempt to rotate or twist the baby unit by hand.
- For the **F680**, insert one of the in-box batteries in the bottom of the device. The battery should be inserted with the label facing downwards.

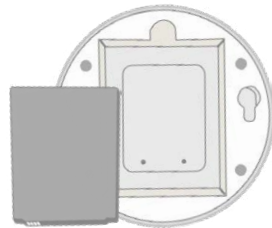



# TABLE OF CONTENTS

<b>1. Safety Instructions</b>	18	<b>8. Monitoring Your Home Via the App</b>	42
<b>2. Getting Started</b>	20	<b>9. Grant Access</b>	46
<b>3. Using the Home Monitor</b>	22	<b>10. Zone Detection</b>	54
3.1 Setting Up		<b>11. Timeline</b>	56
3.2 Power On or Off the Home Monitor		<b>12. Further Information</b>	58
<b>4. Proper Disposal of the Device</b>	24	• Exclusions from Coverage	
<b>5. Cleaning Your Device</b>	25	• How to Obtain Warranty Service or Other Information?	
<b>6. Troubleshooting</b>	26	• FCC, IC And CE Regulations	
<b>7. "KODAK Smart Home" In-App Setup</b>	28	• Warning	
		• EC Declaration of Conformity	
		<b>13. Technical Specifications</b>	72

# 1. SAFETY INSTRUCTIONS



## WARNING:

**Strangulation Hazard:** Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft away). Do not remove this tag. NEVER use extension cords with AC Adapters. Only use the AC Adapters provided.

### Home Monitor Set Up & Use:

- Determine a location for the monitor that will provide the best view for the area you want to monitor.
- Place the monitor on a flat surface, such as a dresser, bureau or shelf. You can also mount the monitor to a wall securely using the keyhole slots that can be found underneath the monitor.
- NEVER place the monitor or cords within a cot.

This Home Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User Manual, safe to use. Therefore, always read the instructions in this User Manual carefully before using the device.

- Adult assembly required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Home Monitor is not a substitute for responsible adult supervision.
- Keep this User Manual for future reference.
- Do not place the Home Monitor or cords in the cot or within reach of the children (the Unit and cords should be more than 3 feet/0.9 meters away).
- Keep the cords out of reach of children.
- Do not cover the Home Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Home Monitor in damp areas or close to water.
- **Only use the chargers and power adapters provided.**  
**Do not use other chargers or power adapters as this may damage the device.**
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical outlets.

## 2. GETTING STARTED

### *Home Monitor Power Supply*

1. Insert the small end (USB) of the in-box power adapter (Output 5V, 1500mA) into the USB socket at the back of camera. The F670 model, requires a wired connection and has to be plugged in at all times. The F680 camera should be charged for 6 hours and the F685 should be charged for 8 hours.
2. Insert the other end of the power adapter into a suitable electrical outlet.
3. Slide the ON/OFF switch to the ON position to switch on the camera. The power indicator lights up in blue.
4. Slide the ON/OFF switch to the OFF position to switch off the Home Monitor. The power indicator lights up in red, indicating that the camera is being charged.  
**\*IMPORTANT: Only use the supplied power adapter.\***

#### **NOTE:**

**F680** and **F685** Home Monitors are portable and have a rechargeable battery. The **F670** Home Monitor does not have a battery, and only works via a wired connection.

## 3. USING THE HOME MONITOR

*Please read these instructions carefully, and be aware that Home Monitor is only intended as an aid. It is not a substitute for responsible adult supervision.*

### 3.1 Setting Up

- Make sure that the Home Monitor is switched on.
- Place the Home Monitor in a convenient location (e.g. on a table, mount on wall...etc) and point the camera lens towards the area you want to monitor.

#### **NOTE:**

- Do not place the Home Monitor within reach of a child or baby! If there is interference with the picture or sound, try moving the units to different locations, and ensure that they are not close to any other electrical equipment.
- If you hear a high pitched noise. This is by design. As the units are designed to be operated at some distance. So please move the units further apart to avoid this noise.
- It is only recommended to use a Class 10 micro-SD up to 32GB (Facing the camera, insert the micro-SD card with the label towards you) and the file format supported is FAT32 only.

### 3.2 Power On or Off the Home

- To turn on the Home Monitor, slide the ON/OFF switch to the ON position. The power indicator will light up in blue.
- To turn off the Home Monitor, slide the ON/OFF switch to the OFF position. The power indicator goes Off if the battery is not being charged, or lights up in red if it is charging.

## 4. PROPER DISPOSAL OF THE DEVICE



When the product comes to the end of its lifecycle, you should not dispose of it with normal household waste. Take the product to a collection point for the recycling of its electrical and electronic components.

This is indicated by the symbol on the product, User's Guide and/or packaging.

Some of the product materials may be reused if you take them to a recycling point. By reusing some parts or raw materials from used products, you make a significant contribution to environmental conservancy.

Please contact your local authorities if you require any further information on the collection points in your area.

Please dispose of the battery pack in an environmentally-friendly manner in accordance with your local regulations.

## 5. CLEANING YOUR DEVICE

Wipe your Home Monitor with a slightly moistened or anti-static cloth. Refrain from using cleaning agents or abrasive solvents.

### Cleaning and Maintenance

- Never clean any part of the product with thinners or other solvents and chemicals – this may result in permanent damage to the product which is out of the scope of coverage of the Warranty.
- Make sure that your Home Monitor stays away from hot, humid areas or conditions, strong sunlight and avoid moisture.

### Note:

- Always turn off and disconnect the power adapter prior to cleaning your Home Monitor.
- *We have made every effort to ensure that your Home Monitor is highly reliable. Yet, if anything goes wrong, please do not try to repair it yourself. Instead, please contact our Customer Support team for help at [support@kodaksmarthome.com](mailto:support@kodaksmarthome.com) or visit [www.kodaksmarthome.com/support](http://www.kodaksmarthome.com/support)*

## 6. TROUBLESHOOTING

### **The Power Indicator on the Home Monitor does not turn on**

- Check whether the Home Monitor is powered on.
- Check whether the battery is charged.
- Recharge the Home Monitor by connecting it to the power supply.

### **The temperature and humidity reading on the Home Monitor is not correct (only applies for the F680/F685)**

- Upon power on, the temperature and humidity will indicate an accurate reading up to 15 minutes, as the Home Monitor requires some time to adjust according to the surrounding ambience temperature and humidity.

 
## 7. "KODAK SMART HOME" IN-APP SETUP

*You can connect the Home Monitor with your mobile device. Read on for a step-by-step guide.*

### Step 1: Download the "KODAK Smart Home" App

To download the "KODAK Smart Home" app:

- On your mobile device, visit the App Store (iOS) or Google Play (Android)
- Search for "KODAK Smart Home"
- Download and install the "KODAK Smart Home" app on your mobile device

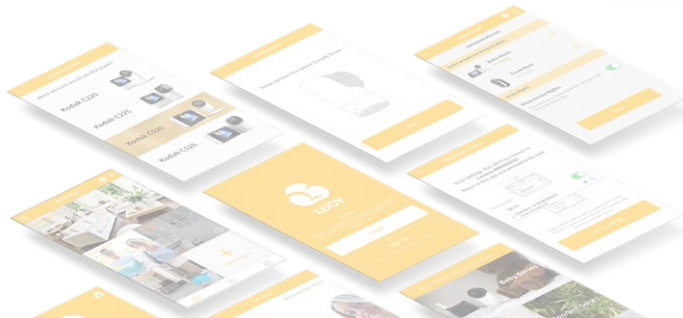


scan to install

## Step 2: Create or Login to Your Account

 If this is your first **KODAK Smart Home** product, you will be asked to create an account. To set up an account:

- On your mobile device, open the **KODAK Smart Home** app
- Tap **SIGN UP**
- Follow the in-app instructions to create a new account

If you already have another KODAK Smart Home product installed, simply select **LOGIN**:

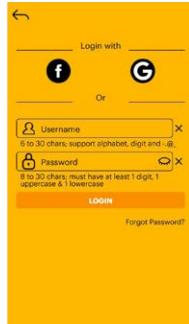




### Step 3: Add the Home Monitor to Your App

Having your Wi-Fi network name and password handy, you will now pair your Home Monitor near your wireless router with the “KODAK Smart Home” app:

 - Select **Add new device...**
- Select **Home Series > KODAK CHERISH F670/F680/F685**
- The app will then walk you through the setup process

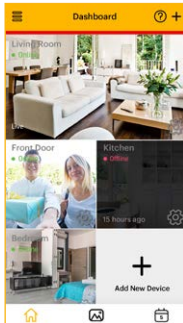

## Step 4: Get Your Home Monitor (Camera) into the Setup Mode

In the middle of the setup process, you will be required to get your **KODAK CHERISH F670,F680/ F685** Wi-Fi Home Monitor into the setup mode. To do this:

 
 
- Press and hold the Pair button for 3 seconds until you hear a beep sound
- You will then hear **Start Pairing Mode**, indicating that the Home Monitor has entered the setup mode.  
You may now release the **Pair** button and tap



## Step 4.1: Connect to the Camera's Wi-Fi from Your Phone(For IOS Only)

For IOS devices, you will have to connect to the camera's Wi-Fi through your Wi-Fi settings of your phone.  
To do this:

- Tap the **Go To Settings** button to access to the Wi-Fi settings on your phone
- In the Wi-Fi settings of your phone, connect to **KodakCam-FXXXXXXX** and return to the app.

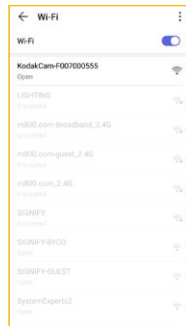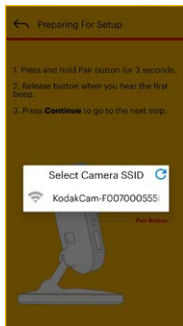


## For F670/F680

### *Step 5: Wait While Pairing is in Progress*

Your Home Monitor should now start pairing with your mobile device automatically:

 - You will hear **Setup Completed** when the Home Monitor is successfully paired
- You may choose one of the recommended names or rename your Home Monitor by selecting **Custom**.

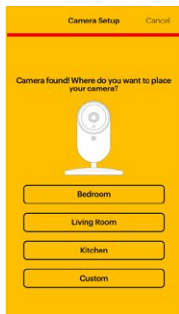


## For F685

### *Step 5: Wait While Pairing is in Progress*

Your Home Monitor should now start pairing with your mobile device automatically:

 
- You will hear **Setup Completed** when the Home Monitor is successfully paired
- You may choose one of the recommended names or rename your Home Monitor by selecting **Custom**.

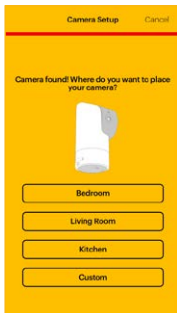

## Step 6: Test Your Baby Monitor



The Baby Monitor is now added to the Dashboard of the KODAK Smart Home app:

 - You may now run a test by clicking on the snapshot view from your desired baby unit in order to access the live view
- You should be able to see video from the Baby Unit (Camera) of your Baby Monitor in the “KODAK Smart Home” app

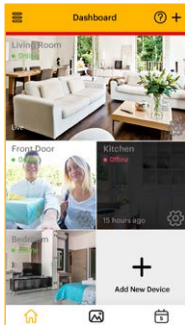



## Step 7: Explore the Basic Setting of Your Baby Monitor in the App

  - **When you monitor remotely via the app (using your mobile data or another WiFi) the live streaming will need to be refreshed every 5 minutes.**
- When there is movement in the environment, the camera will start to record. You can set the level of the motion under the camera settings. **Low** means that the camera will detect and capture stronger motions while **High** means the camera will detect and capture any motions like even the movement of a curtain.

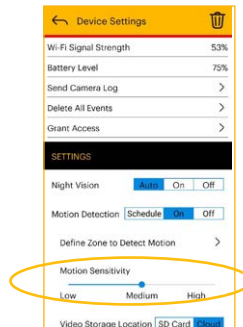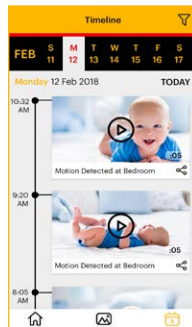


## 8. MONITORING YOUR HOME VIA THE APP

   - After you have created an account and installed your Home Monitor, simply click on the **KODAK Smart Home** app icon to monitor your home by visiting the dashboard.

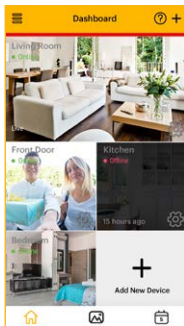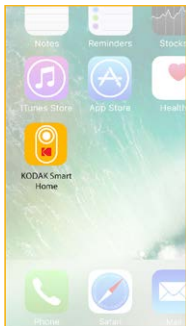




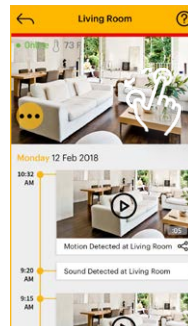



 
- You can pinch outwards to zoom in on the video image, or pinch inwards to zoom out.
- You can swipe left and right, up and down on the video image for pan and tilt.

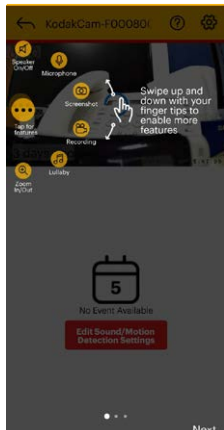









## KODAK Smart Home Icons

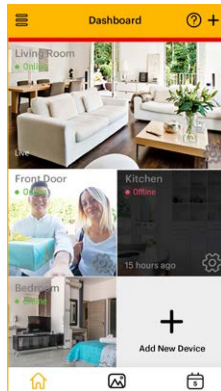 You may also perform one or more of the following actions by clicking on the **MENU** icon:



-  **Menu**  
Click to open/close menu
-  **Mute**  
Press this button to toggle between mute/unmute
-  **Talk**  
Press this button to talk to your baby
-  **Record a Video**  
Press this button to record a video
-  **Take a Photo**  
Press this button to take a photo
-  **Melody**  
Press this to play music to your baby
-  **Zoom in/out**  
Press this to zoom in/out




-  **Dashboard**  
Tap here to return to the "Home" screen
-  **Video Gallery**  
Tap here to view your recorded footage
-  **Timeline**  
Tap here to check history of your actions
-  **Add New Device**  
Tap to add new device
-  **Side Menu**  
Press this open/close the side menu
-  **Camera Settings**  
Tap to open and edit the settings of a device
-  **Hints**  
Tap to open hints on the operations of the app

For additional help and further information about our products, visit [www.kodaksmarthome.com](http://www.kodaksmarthome.com) or email to [support@kodaksmarthome.com](mailto:support@kodaksmarthome.com).


## 9. GRANT ACCESS
 
### 9.1 Add Friend


You may grant access to your family and friends using the feature called **Grant Access** which is located on the side menu of the Dashboard.

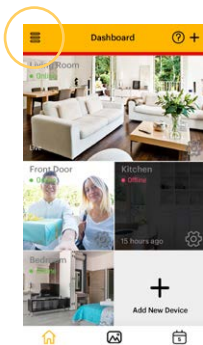

 
1. Click on “☰” which is located on the Dashboard

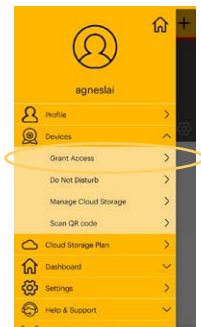

 2. Select **Grant Access** under Devices

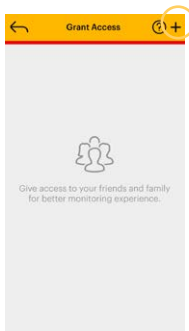

 
3. Click on + which is located on the top right

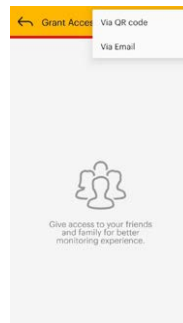


4. Simply follow the instructions on the app and click **Save** to add a friend




## 9.2 Add a Friend-via QR Code

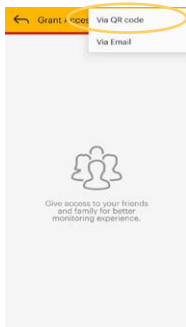 

 1. Click on **via QR code** to generate a QR code to add friend

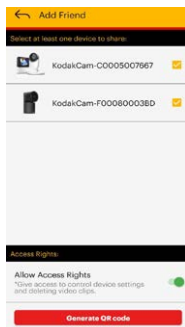


 2. Select the camera you want to share and turn on or off the **Access rights**

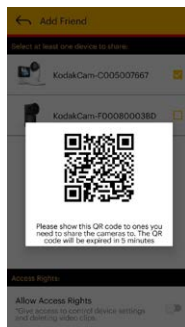


3. Let your friend scan the QR code from your device

## 9.2 Add a Friend-via Email

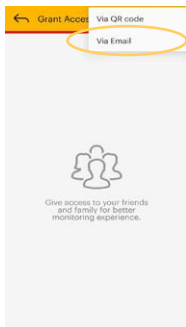 

 
1. Click on **via Email**

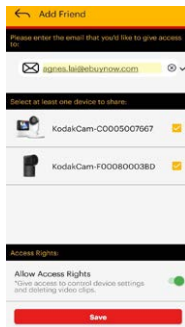


2. Add an email and select the camera(s) that you want to give access to

## 9.3 Edit a Friend

   
You can edit friends and make changes to the settings/permissions anytime you want.

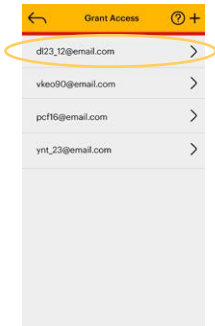


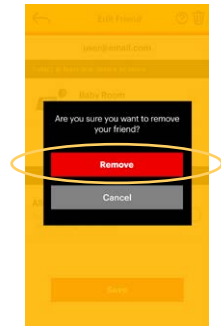 
1. Click on the email of the person that you would like to make changes to

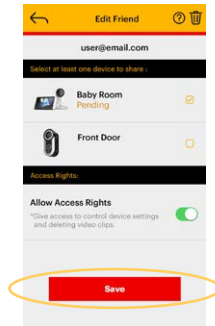

2. Click **Save** to save changes

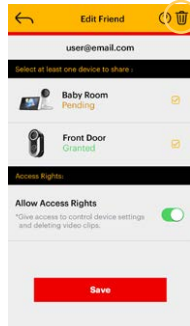

3. Click on “” to remove friend







4. Click **Remove** to confirm

## 10. ZONE DETECTION
    
### 10.1 Zone Detection Set up

If you want to monitor only specific areas, you can do this up by setting zones on the app. The app will notify you when there is motion detected in the zone.

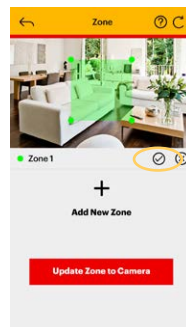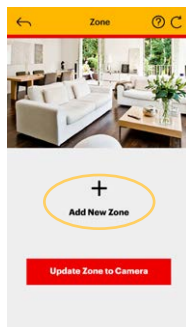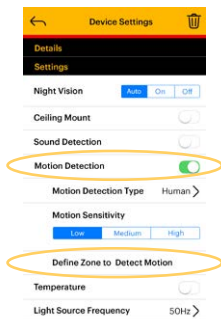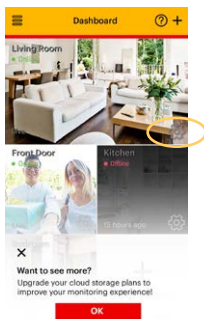


1. Click on “**⚙**” that is located at the right bottom corner
2. Switch on **Motion Detection**, click **Define Zone to Detect Motion**.
3. Click on **+** which is located at the middle of your screen.
4. Use your finger to draw the zone, Press “**✓**” when finished and click on **Update Zone to Camera** to save


# 11. TIMELINE
 
## 11.1 Recording

When the Home Monitor detects motion, the timeline function will record it and you can check anytime.

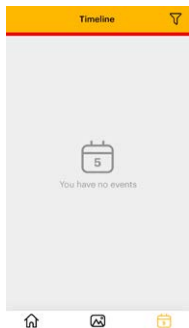

 
1. At first, the timeline will not have any video clips

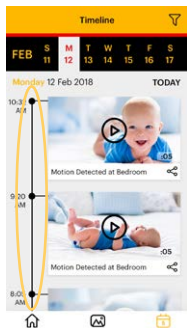

2. When your monitor detects motion, the timeline function will record it



 3. Click on "⌵" which is located on the Timeline

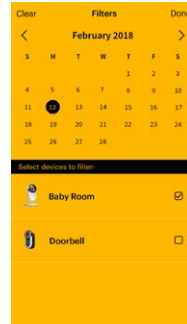

4. Choose the date range you want to review the video clips for

## 12. FURTHER INFORMATION

If your product is not functioning properly:

- Consult this User Manual or the Quick Start Guide.
- Check out our support website at **www.kodaksmarhome.com/support**
- Get in touch with our Customer Service, simply email us at: **support@kodaksmarhome.com**
- To order a replacement battery pack, please get in touch with our Customer Service.

### **Consumer Products and Accessories Limited Warranty (“Warranty”)**

#### **What does this warranty cover?**

- Subject to the exclusions contained below, eBuyNow warrants that this product or certified accessory sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is non-transferable.

#### **Who is covered?**

- This Warranty extends only to the first consumer purchaser and is non-transferable.

#### **What will eBuyNow do?**

- eBuyNow or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

## What other limitations are there?

- ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL EBUYNOW OR ITS AUTHORISED DISTRIBUTOR BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

- Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the Products' original purchase by the first consumer purchaser of the product.
Consumer Accessories	One (1) year from the date of the Accessories' original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired and Replace	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

## EXCLUSION

- **Normal Wear and Tear:** Regular maintenance, repair and replacement of parts and components due to normal wear and tear are not covered.
- **Batteries:** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are within the coverage of this Warranty.
- **Abuse & Misuse:** Defects or damage due to:
  - (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (such as cracks and scratches) to the surface of the product resulting from misuse;
  - (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food;
  - (c) use of the Products or Accessories for commercial purposes or subjecting the Product or any Accessory to abnormal usage or conditions; or
  - (d) other acts which are not the fault of eBuyNow or its authorised distributor, are not covered.
- **Use of Non-eBuyNow branded Products and Accessories:** Defects or damage due to the use of non-eBuyNow branded or certified Products or Accessories or other peripheral equipment are not covered.
- **Unauthorised Service or Modification:** Defects or damage due to service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than eBuyNow, or its authorised service centers, are not covered.
- **Altered Products:** Products or Accessories with
  - (a) serial numbers or date tags that have been removed, altered or obliterated;
  - (b) broken seals or that show evidence of tampering;
  - (c) mismatched board serial numbers; or
  - (d) nonconforming or eBuyNow branded housings, or parts, are not covered.
- **Communication Services:** Defects, damages, or the failure of Products or Accessories resulting from any communication service or signal you may subscribe to or use with the Products or Accessories are not covered.



## HOW TO OBTAIN WARRANTY SERVICE OR OTHER INFORMATION?

To obtain service or information, please email to **support@kodaksmarhome.com**.

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to an eBuyNow Authorised Repair Center.

To obtain service, you must include:

- (a) the Product or Accessory;
- (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product;
- (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product;
- (d) a written description of the problem; and, most importantly;
- (e) your address and telephone number.

These Terms and Conditions constitute the complete warranty agreement between you and eBuyNow regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by eBuyNow or representations made by any agent employee or staff of eBuyNow, that may have been made in connection with the said purchase.

## FCC, IC AND CE REGULATIONS

Trade Name: KODAK  
Model: F670 / F680/ F685  
Responsible Party: eBuyNow  
Address: eBuyNow LLC 470 Olde  
Worthington Road, suite 200  
Westerville, OH43082 USA

Telephone Number: 1 (250) 661-0291

### FCC Part 15



**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
  - (1) this device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communication may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003. CAN ICES-3(B)/NMB-3(B)

## WARNING

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

### **Industry Canada**

This device complies with Industry Canada license-exempt RSS standard(s): Operation is subject to the following Two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **RF Radiation Exposure Statement Caution:**

This Transmitter must be installed to provide a separation distance of at least 20cm from all persons.

### **IC Radiation Déclaration d'exposition Attention:**

Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20cm de toute personne.

## EC DECLARATION OF CONFORMITY

We the manufacturer/ Importer: PerimeterSafe/  
eBuyNow declare under our sole responsibility that  
the following product

Type of equipment: Smart Home Security Monitor  
Model Name: F670/F680/F685  
Brand: KODAK

complies with the essential protection requirements  
of RED Directive 2014/53/EU on the approximation  
of the laws of the Member States relating to Radio  
Spectrum Matters, the Council Directive 2004/108/  
EC on the approximation of the laws of the Member  
States relating to electromagnetic compatibility (EMC)  
and the European Community Directive 2006/95/EC  
relating to Electrical Safety, Directive 2011/65/EC on  
the restriction of use of hazardous substances (RoHS)  
and 2009/125/EC relating to eco-design requirement  
for Energy-Related Products (ErP).

Assessment of compliance of the product with the  
requirements relating to the essential requirements:

Radio Spectrum: EN300328 V2.1.1

EMC: EN301489-17 V3.2.0

EN301489-1 V2.2.2

Electrical Safety: EN60950-2006+A11+A1+A12+A2

RF Safety: EN62311:2008

ErP: EN50564:2011

The product is labelled with the European Approval  
Marking CE as shown. Any unauthorised modification of  
the product voids this Declaration.



## 13. TECHNICAL SPECIFICATIONS

### KODAK CHERISH F670/F680

Home Monitor	
Camera Sensor	color CMOS 2Mpixel 1080p sensor
Lens Viewing Angle	M12 lens FOV 110 degrees
Power Adapter	Input: 100-240V AC, Output: 5.0V DC, 1500mA
	<b>WARNING</b> Use only with supplied power supply.  Battery (F680 ONLY) : 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack
Frequency Band	2400-2483.5 MHz
Operating Temperature	0°C - 40°C
Maximum RF Power	20dBm (for CE)

### KODAK CHERISH F685

Home Monitor	
Camera Sensor	color CMOS 2Mpixel 1080p sensor
Lens Viewing Angle	M12 lens FOV 110 degrees
Power Adapter	Input: 100-240V AC, Output: 5.0V DC, 1500mA
	<b>WARNING</b> Use only with supplied power supply. Battery: 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack
Frequency Band	2400-2483.5 MHz
Operating Temperature	0°C - 40°C
Maximum RF Power	20dBm (for CE)

## **KODAKSMARTHOME.COM**

Manufactured, distributed or sold by eBuyNow eCommerce Ltd.  
All other trademarks are the property of their respective owners.  
© 2018 eBuyNow eCommerce Ltd. All rights reserved.

